



## Four easy steps to installation

1. Fix the mag lock to the smooth side of the sliding plate.

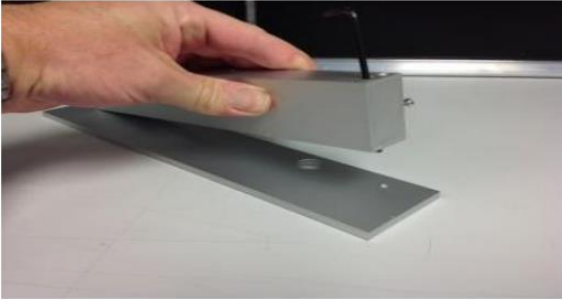

2. Mag attached to sliding plate (rib side face up) with the cable coming through.

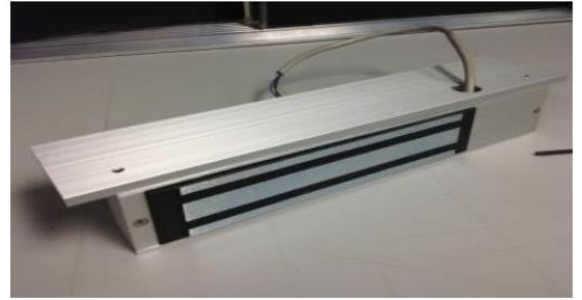

3. Slide the plate with the mag lock attached so that mag meets flush with the armature.



4. Tighten the top 6 fixings as much as possible using the allen key.



## SDGi Completed Installation

